



Stainless Steel Electric Kettle
1.8L

Using your Avancer Kettle

Before using your new Avancer Kettle, please have read of the user manual to familiarize yourself with the functions and safety considerations of this device.

Filling your Kettle

- Ensure that the Kettle is lifted off the base before filling.
- To fill the kettle, open the cover by lifting the lid.
- Fill to the desired level (Min 0.8 L~Max.1.8L)
- Close the lid by pressing it down until it clicks into place.

Switching On/Off

- Connect the Plug to a 240V power point.
- To switch on the kettle, press the On/Off switch downwards. The power indicator light will then turn on.
- When the water has boiled the kettle will automatically switch itself off.
- You can halt the boiling process at any time by turning the Kettle off by flicking the On/Off switch. The power indicator light will then turn off.

Please Note:

- Do not open the lid while steam is coming out of the spout to avoid burns.
- Your Avancer Kettle should only be used with the base it came with.

Cleaning your Kettle

- First read the instructions in the section titled “SAFETY

WARNINGS”.

- Avoid using abrasive cleaning agents.

Descaling

For normal use, descale the kettle at least twice a year by following the procedure below:

TO CLEAN THE INSIDE OF THE KETTLE:

- Use a kettle de-scaling solution available from most supermarkets or household suppliers, OR
- Half fill the kettle with tap water and add the juice of 1 lemon to the water.
- Boil this mixture and allow it to stand for 15 minutes. Re-boil the mixture and allow it to stand for a further 15 minutes. Re-boil this mixture a third time and rinse the kettle well.

This procedure may need to be repeated in extreme cases. Abrasive cleaners **MUST NOT** be used as this can damage the stainless steel finish.

Connection to Power

- Before connecting your Avancer Kettle to a power point, check that you are connected to 220-240V AC 50Hz mains power, which is the standard in Australian households.
- Your Avancer Kettle must be earthed and should be disconnected from mains power when not in use. Do not allow your Kettle to be exposed to rain or moisture outside normal use.

SAFETY WARNINGS

For your own safety read the following instructions carefully before attempting to connect this unit to mains power:

You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources will damage the appliance.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

3. The kettle is only to be used with the stand provided.

4. CAUTION: Do not operate the kettle on an inclined plane, Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.

5. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Disposal Information



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

Warranty

This product is guaranteed against manufacturing defects for a period of 1 year.

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use. In the event of a problem with the product within the guarantee period please email support@avancer.com.au.

If the Kettle is shown to have had an inherent defect present at the time of sale, Avancer will provide you with a replacement.